


# Überschub-Feststeller

## Montageanleitung

# WSS

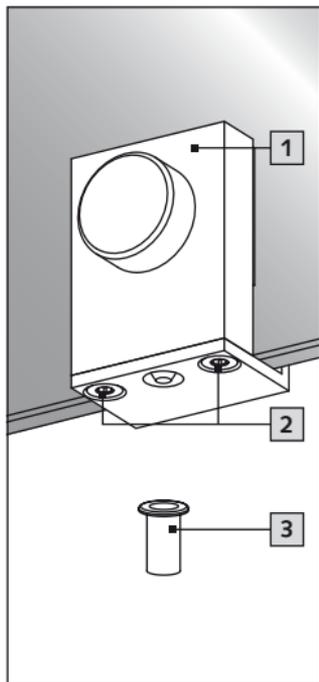

### Ⓓ Montageanleitung

#### Überschub-Feststeller

Art.-Nr.: 26.202.0400.--- bis  
26.202.1100.---

- Glas und Zwischenlagen müssen staub- und fettfrei sein, ggf. mit handelsüblichem Glasreiniger reinigen.
  - Torxschlüssel T20.
1. Bodenbuchse **3** im vorgebohrten Loch einbringen (Ø 12 mm, 20mm tief). Bauseits mit Vergussmasse sichern.
  2. Überschub-Feststeller **1** auf Türblatt aufschieben. Ggf. Schrauben **2** max. eine Umdrehung lösen um den Überschub-Feststeller zwängungsfrei aufschieben zu können und Schrauben **2** wieder festziehen (den Artikel optional zusätzlich mit Silikon sichern – bei 12 mm Glasstärke generell erforderlich).

### ⒼⒷ Assembly Instruction

#### Slide over door bolt

Art.-N°: 26.202.0400.--- to  
26.202.1100.---

- Glass and gaskets have to be dust- and grease free, if necessary please clean with standard glass cleaner.
  - Torx wrench T20.
1. Insert floor socket **3** into pre-drilled hole (Ø 12 mm, 20mm deep). Secure on site with sealing compound.
  2. Insert slide over door bolt **1** on the door leaf. If necessary loosen the screws **2** max. one rotation to slide over the door bolt without constraint forces and tighten screws **2** again (optional additionally secure the article with silicone – generally required for 12 mm glass thickness).